




Be Right™

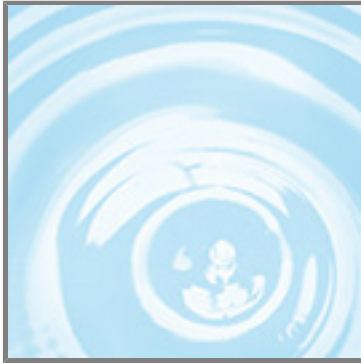

EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, 1 stream, 4x mA

Proizvod #: EZ3505.9800140T
EUR Cijena: Kontaktirajte nas
Nije prikazan datum isporuke

Accurate Chloride Measurement in Variable Water Matrices

Changing water matrices, fouling and interferences can make chloride ISE measurements unstable. The EZ3505sc combines discontinuous ISE analysis with a standard addition method to compensate for matrix effects and deliver repeatable chloride results - even when sample conditions shift. Automated operation reduces manual calibration and sensor maintenance while supporting treatment efficiency and regulatory compliance.

Monitor up to eight sample streams from one analyser to reduce footprint and infrastructure cost. Standard analog and digital communications integrate easily with existing plant networks for real-time data, diagnostics and faster decisions.

Benefits:

- Standard addition compensates for interferences in variable matrices
- Discontinuous ISE analysis delivers stable, repeatable chloride results
- Reduces manual calibration and sensor maintenance
- Multi-stream capability: up to 8 sample points per analyser
- Easy integration via common analog/digital protocols

Advanced Standard Addition Technology

Ensure reliable data accuracy with advanced discontinuous and standard addition modes. This feature automatically compensates for interferences, delivering precise results even in complex or changing water conditions. Avoid compliance risks caused by inconsistent or unreliable measurements.

Designed for Low-Maintenance Operation

Frequent manual calibration and sensor cleaning increase maintenance effort and downtime. The EZ3505sc employs discontinuous and automated standard addition modes to compensate for matrix effects, stabilise potentiometric response, reduce reagent consumption, and maximise analyser uptime for reliable chloride monitoring.

Seamless System Integration

Isolated data silos hinder effective plant management. Featuring standard analogue and digital communication protocols, this analyser integrates easily into existing plant networks. Real-time visibility ensures you can make informed decisions quickly based on current process conditions.

Cost-Effective Scalability

Monitoring multiple sample points traditionally requires significant capital investment. This system supports multi-stream functionality, allowing a single unit to analyse up to 8 sample streams. You gain comprehensive process insight while optimising infrastructure costs and reducing equipment footprint.

Specifikacije

Analogni izlazi:	Active 0 - 20 mA (or 4 - 20 mA) max. 500 Ohm load, standard 4, optional: 8
Automatsko čišćenje:	Yes; Frequency freely programmable: 6 hours, 12 hours, daily, weekly
Broj uzoraka:	Standard: 1 Optional accessory for 2, 4, or 8 sample streams
Certificiranja:	CE, ETL certified to UL and CSA safety standards, UKCA
Demineralised water:	Internal dilution option: Rinse water and Dilution water
Digital outputs:	Relays: 5 contacts, not user configurable: Malfunction, maintenance, analysis ready, sample ready, sample ready (EZ9150) Ethernet Connections: Optional: Claros Ethernet connection and Modbus TCP/IP Ethernet connector; LAN version; 10/100 Mbps or Profinet or Ethernet IP RS485 communication: Profibus DP or Modbus RTU
Dimenzije (V x Š x D):	688 mm x 460 mm x 340 mm
Earth connection:	Earth connection Dry and clean earth pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm ²
Garancija:	24 mjeseci
Granica detekcije:	No dilution 2 - 100 mg/L Cl ⁻ : 2 mg/L 5 - 250 mg/L Cl ⁻ : 5 mg/L 10 - 500 mg/L Cl ⁻ : 10 mg/L 20 - 1000 mg/L Cl ⁻ : 20 mg/L Internal dilution 100 - 5000 mg/L Cl ⁻ : 100 mg/L 200 - 10000 mg/L Cl ⁻ : 200 mg/L
Instrument air:	Dry and oil free according to ISA-S7.0.01-1996 quality standard for instrument air. Used to flush the instrument in corrosive environment. Min. 0.2 bar - Max. 0.5 bar
Interferencija :	Bromide [(Br)-], sulphide [(S) ²⁻], iodide [(I)-], cyanide [(CN)-] ions may interfere. Mercury [(Hg) ⁺] must be absent. Ammonia [NH ₃] and thiosulphate [(S ₂ O ₃) ²⁻] may interfere. Fats, oil, proteins, surfactants and tar.
Kalibracija:	Automatic; 2-point; offset or slope; Frequency freely programmable: 6 hours, 12 hours, daily, weekly. Note: manufacturer recommends that a calibration is done when the reagents are replaced
Kivete:	No dilution Default: 5 minutes Continuous: 4 minutes Internal dilution

	Default: 10 minutes
	Continuous: 7 minutes
Klasa zaštite:	IP44
Kvaliteta uzorka:	Maximum particle size 100 µm, < 0.1 g/L; Turbidity < 50 NTU
Masa:	Max. 35 kg
Materijal:	Hinged part: Thermoform ABS, Door: PMMA
	Wall section: Galvanised steel, powder coated
Mjerna metoda:	Ion-Selective Electrode with standard addition
Mjerni rang:	No dilution
	2 - 100 mg/L Cl ⁻
	5 - 250 mg/L Cl ⁻
	10 - 500 mg/L Cl ⁻
	20 - 1000 mg/L Cl ⁻
	Internal dilution
	100 - 5000 mg/L Cl ⁻
	200 - 10000 mg/L Cl ⁻
Napajanje:	100 - 240 VAC, 50/60 Hz
	Max. power consumption: 120 VA
Odvod:	Atmospheric pressure, vented, min. Ø 32 mm
Parametar:	Chloride
Precision:	Better than 2% full scale range for standard test solutions
Protok uzorka:	100 - 300 mL/min
Reagent Requirements:	Keep between 10 - 30 °C
Što je u pretincu:	EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, Instruction Manual, 1 x Double Bit Door Key, 1 x Mounting Brackets, 1 x ISE Electrode and Chloride Electrode, combined, and 2 x empty 5L Reagent Containers with Fittings (for Buffer and Standard Cl Solution)
Temperatura prostora:	10 - 30 °C ± 4 °C deviation at 5 - 95% relative humidity (non-condensing)
Temperatura uzorka:	10 - 30 °C
Uzorak: tlak:	By external overflow vessel (open to atmospheric pressure)
Validation:	Automatic; Frequency freely programmable: 6 hours, 12 hours, daily, weekly

Što je u pretincu

EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, Instruction Manual, 1 x Double Bit Door Key, 1 x Mounting Brackets, 1 x ISE Electrode and Chloride Electrode, combined, and 2 x empty 5L Reagent Containers with Fittings (for Buffer and Standard Cl Solution)